



PROGRAMMING INSTRUCTIONS FOR REGENCY 250

- 1) Make sure that jumper JU401 has not been cut.
- 2) Turn the unit on.
- 3) Press Pro. Prior.
- 4) Press 0-all reference to 0 corresponds to 10 on the key board.
- 5) Press The six digits of the receive frequency (this is also the transmit frequency if this is a simplex frequency; i.e. 151.625 or 154.000).
- 6) Press 0 for simplex
8 for half duplex
- 7) Press 4 for Tx disable
2 for CTCSS encode only
or
0 for normal transmit and receive operation
- 8) The next digits determine CTCSS frequency. For no CTCSS press 00.

01	67.0	02	71.9	03	74.4	04	77.0	05	79.7
06	82.5	07	85.4	08	88.5	09	91.5	10	94.8
11	97.4	12	100.0	13	103.5	14	107.2	15	110.9
16	114.8	17	118.8	18	123.0	19	127.3	20	131.8
21	136.5	22	141.3	23	146.2	24	151.4	25	156.7
26	162.2	27	167.9	28	173.8	29	179.9	30	186.2
31	192.8	32	203.5	33	210.7	34	218.1	35	225.7
36	233.6	37	241.8						

- 9) If simplex was chosen, go to step 10. If half duplex was chosen, enter the six digit number of the transmit frequency.
- 10) Press Enter, then the channel number the frequency is to be stored in.
- 11) Press Manual, then the digit of the channel to review the channel.
- 12) For entering another channel, go back to step 5. If no other channels are to be programmed, turn the unit off, then on. The unit will now be ready for normal operation.

NOTE: REMOVE JUMPER JU401 AFTER PROGRAMMING.

